

Leto Enterprises Incorporation

Ageless Wonder Facial Muscle Stimulation System

User Manual

(Version: V1.0)

(Release with software version 1.0)



Table of Content

1. Intended Use	2
2. Indications for Use	2
3. Contraindications.....	2
4. Adverse Reaction	2
5. Warnings.....	3
6. Precautions	3
7. Special Population	2
8. Safety Instructions.....	4
9. Product Information	4
9.1 Product Introduction.....	4
9.2 Device Drawing	5
9.3 Device Components	6
9.4 Panel & Keypad	6
9.5 Treatment Modes.....	7
9.6 Specification	9
10. Operating Instructions.....	16
10.1 Installation	16
10.2 First Operation	20
10.3 Wand Placement.....	21
10.4 Mode Selection	21
10.5 Intensity Selection.....	22
10.6 Timer Setting.....	22
10.7 Auto Functions	23
11.Troubleshooting	23
12. Frequency Asked Questions	24
13. Maintenance.....	25
14. Transportation	26
15. Warranty Period	26
16. Packing List	27

1. Intended Use

Ageless Wonder Facial Muscle Stimulation System is intended for facial stimulation and is indicated for over-the-counter cosmetic use.

2. Indications for Use

Ageless Wonder Facial Muscle Stimulation System is intended for facial stimulation and is indicated for over-the-counter cosmetic use.

3. Contraindications

The use of Ageless Wonder Facial Muscle Stimulation System is contraindicated in the presence of:

- ♦ Heart disease or cardiac infirmities, whether or not you have a pacemaker or other implanted device
- ♦ Epilepsy
- ♦ Multiple Sclerosis
- ♦ Phlebitis in its active phase (inflammation of a vein)
- ♦ Inflamed tissue as a result of disease, injury or surgery
- ♦ Recent scar tissue or surgery
- ♦ Varicose veins in later stages

4. Adverse Reaction

There have not been any reported adverse reactions with the Ageless Wonder Facial Muscle Stimulation System specifically. However, skin irritation and burns beneath the electrodes have been reported with the use of other powered muscle stimulators. If you experience skin irritation or burning, please discontinue use.

5. Special Population

The Ageless Wonder Facial Muscle Stimulation System is for adult use only, and is not suitable for use by infants, toddlers or children. The elderly should only use the device under supervision and at low intensity.

6. Warnings

1. DO NOT use on the neck. The Ageless Wonder Facial Muscle Stimulation System is intended only for cosmetic use on facial tissue, and no other part of the body. The long-term effects of chronic electrical stimulation are unknown.
2. Apply electrodes ONLY to normal, unbroken, clean skin.
3. DO NOT apply stimulation:
 - a) Trans-cerebrally (through the head).
 - b) Over swollen, infected or inflamed areas of skin or skin eruptions (e.g., phlebitis, thrombophlebitis, varicose veins, etc.).
 - c) Trans-thoracically; the introduction of electrical current into the heart may cause rhythm disturbances, which could be fatal.
 - d) Over, or in proximity to, cancerous or other skin lesions or open wounds.
 - e) Over skin areas that lack of normal sensation.
 - f) If you are epileptic.
 - g) If you have a tendency to hemorrhage.
 - h) In areas on your face in which you have recently received injectable (such as Botox or facial dermal fillers), or near areas in which you have had surgical implants.
 - i) After experiencing acute trauma or following recent surgery.
4. Never use the Ageless Wonder Facial Muscle Stimulation System while driving, operating machinery or during activities in which involuntary muscle contractions may endanger the user or others.
5. DO NOT use the Ageless Wonder Facial Muscle Stimulation System in the bath or shower.
6. Persons with suspected heart problems should consult their doctor before using the Ageless Wonder Facial Muscle Stimulation System.
7. The Ageless Wonder Facial Muscle Stimulation System should never be used while sleeping.
8. DO NOT immerse the Ageless Wonder Facial Muscle Stimulation System device or application wand in water or any liquid.
9. Keep the Ageless Wonder Facial Muscle Stimulation System out of the reach of children.

7. Precautions






1. **IMMEDIATELY STOP** using this device if you experience any adverse effects such as skin irritation, hypersensitivity, burns or any sort of muscular irritation or discomfort.
2. The safety of neuromuscular stimulation during pregnancy or child birth has not been established. Only use the application wand in accordance with the illustrations in this manual.
3. Users should start all sessions in a seated position.

8. Safety Instructions

This user manual contains important information regarding the safe and effective operation of the device. Please do read and understand this user manual before operating the device.

Warning/caution symbols used in this manual apply to hazards or unsafe practices which could result in personal injury or property damage.

Explanation of Symbols

Symbol	Explanation
	Caution
	Manufacturer
	The symbol indicates that the device should be sent to the special agencies according to local regulations for separate collection after its useful life.
	Recycle
	This symbol indicates that the instrument is IEC 60601-1 Type BF equipment. The unit displaying this symbol contains a BF-Type isolated patient applied part providing protection against shock.


9. Product Information

9.1 Product Introduction


The Ageless Wonder Facial Muscle Stimulation System is a battery-powered portable EMS device intended for the improvement of facial muscle tone and for the tightening and firming of the facial skin. It uses specially designed bi-polar low voltage micro-current impulses to stimulate your facial muscles into contracting.

The Ageless Wonder is not for use on injured or otherwise impaired skin or muscles, and in any therapy for the treatment, or prevention of any disease. This device must only be used for the purpose stated – namely for the stimulation of facial muscles as indicated in the instruction manual for personal beauty purposes. All other uses shall be deemed improper.

9.2 Device Drawing

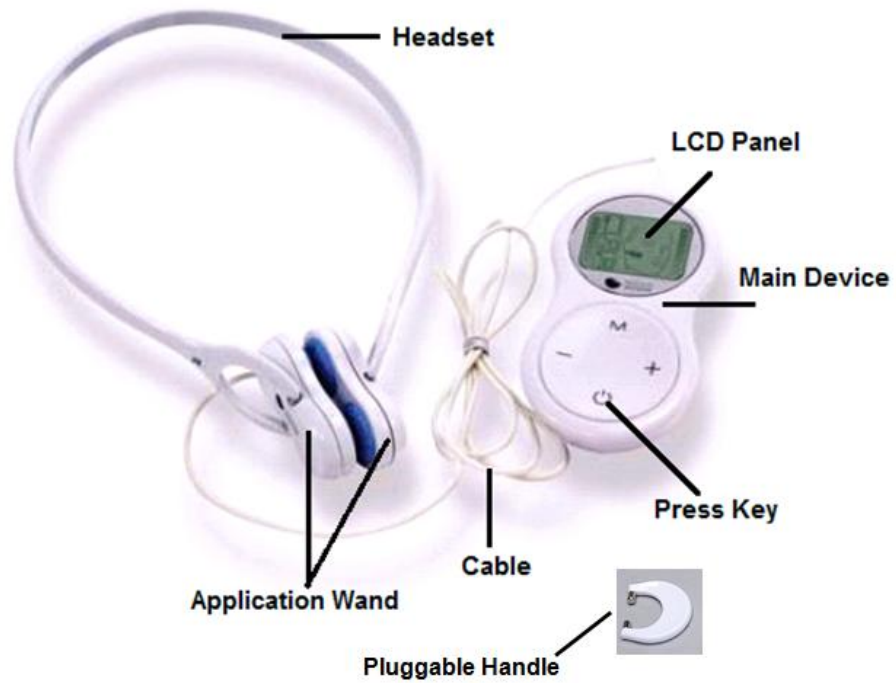

Front View of Device

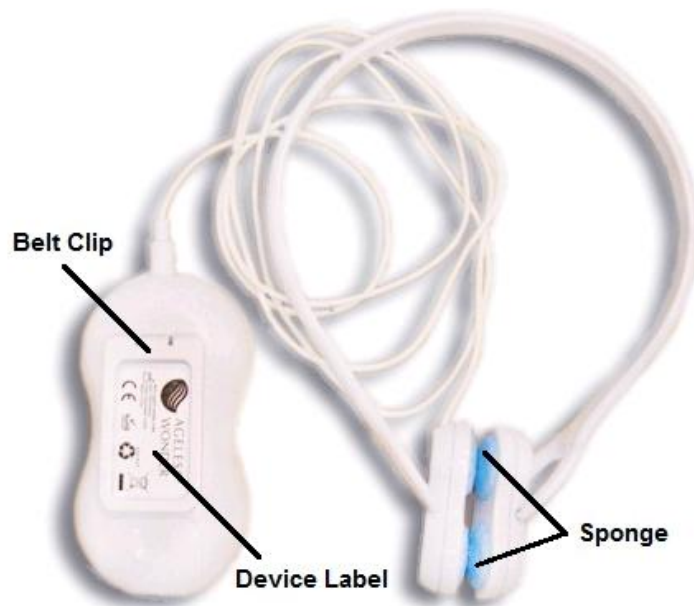

Back View of Device


9.3 Device Components


The key components of the device are as below:

- (1) Main device
- (2) Headset
- (3) Two Application wands
- (4) Press Key (See “Panel & Keypad” part in detail)
- (5) LCD Panel
- (6) Belt Clip
- (7) Device Label
- (8) Conductive Sponge
- (9) Cable
- (10) Alkaline battery
- (11) Pluggable Handle

9.4 Panel & Keypad


Explanation and operating instructions of the LCD panel and keypad are as followings:

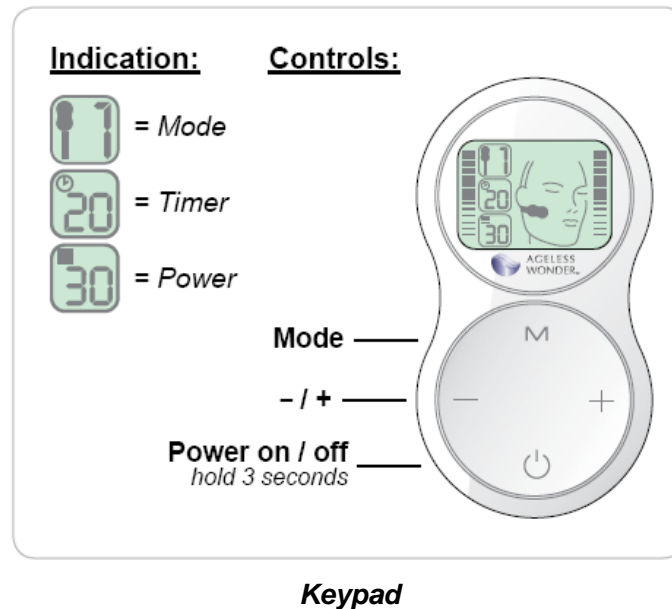

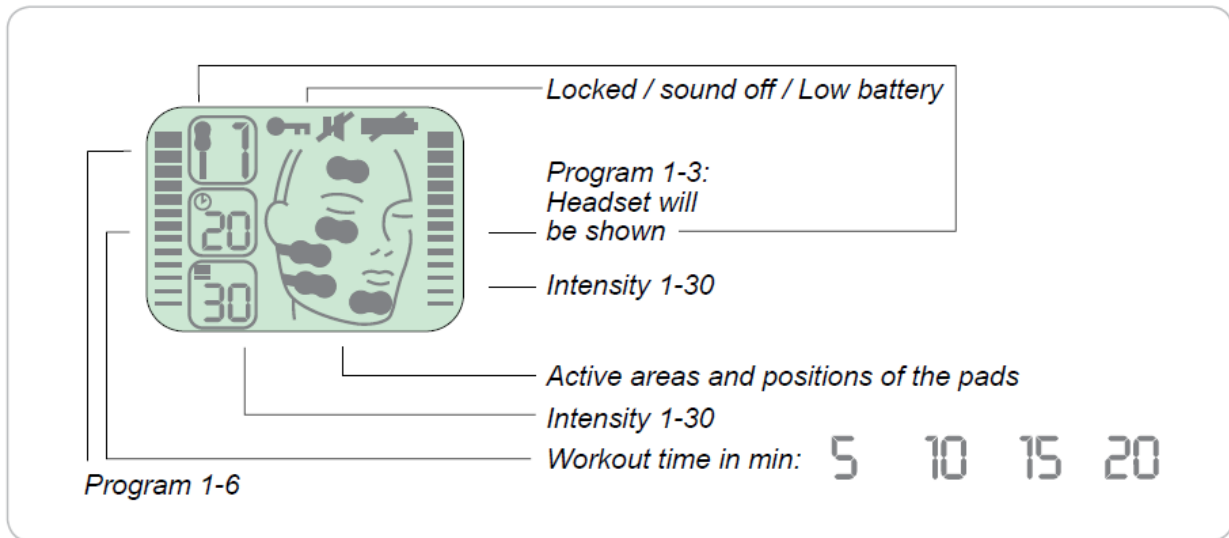





LCD display



EXPLANATION OF BUTTONS

Button	Function	Remarks
M	Select Mode	Press the M button to select the working mode.
-	Decrease	MUTE TOGGLE ON/OFF. Press and hold the M button together with the “-” button for 2 seconds. The LCD will show the mute icon.
+	Increase	KEYLOCK TOGGLE ON/OFF: Press and hold the M button together with the “+” while the device wand is operating and you are in intensity mode. The LCD will show the key lock icon.
	Power On/Off	To turn the power on/off.

9.5 Treatment Modes

One of the greatest benefits of your advanced Ageless Wonder Facial Muscle Stimulation System is that it has several microprocessor-controlled automatic work-out programs, for the application areas for the best possible results in the least amount of time.

<p>Mode 1 – Cheeks – Lift</p> <p>Use the headset for this stimulation mode.</p> <ul style="list-style-type: none"> ● This program will act to give you a more lifted appearance and also gives your skin a tighter and smoother look and feel. ● Position the headset horizontally with the application wands below the cheekbone and approx. 1-2 cm in front of the ear. 	
<p>Mode 2 – Cheeks – Firm and Tone</p> <p>Use the headset for this stimulation mode.</p> <ul style="list-style-type: none"> ● This program will act to give your face a firmer and more toned appearance and also gives your skin a tighter and smoother look and feel. ● Position the headset horizontally with the application wands below the cheekbone and approx. 1-2 cm in front of the ear. 	
<p>Mode 3 – Lower Cheek</p> <p>Use the headset for this stimulation mode.</p> <ul style="list-style-type: none"> ● Select this mode to stimulate the lower cheek, from the corner of the mouth to the upper jaw. ● Position the headset horizontally with the application wands below the lower cheekbone and approx. 2-3 cm in front of the ear. 	
<p>Mode 4 – Forehead</p> <p>Use the handheld wand for this stimulation mode.</p> <ul style="list-style-type: none"> ● Use the wand attached to the cable, plug it into the device. Please note that without the headset, only the wand with the cable will work. We recommend clipping the provided handle into the back of the wand. Select this mode to stimulate the forehead and temporal region. 	


<p>Mode 5 - Chin, jaw line</p> <p>Use the handheld wand for this stimulation mode.</p> <p>Use the wand attached to the cable, plug it into the unit. Please note that without the headset, only the wand with the cable will work. We recommend clipping the provided handle into the back of the wand. Select this mode to stimulate the chin and lower jaw line.</p>	
<p>Mode 6 - Under eye area</p> <p>Use the handheld wand for this stimulation mode.</p> <p>Use the wand attached to the cable, plug it into the unit. Please note that without the headset, only the wand with the cable will work. We recommend clipping the provided handle into the back of the wand. Select this mode to stimulate the area under your eye.</p>	

9.6 Specification

Basic Information	
Trade Name	Ageless Wonder Facial Muscle Stimulation System
Common Name	Facial Toning Device
Classification Name	Transcutaneous Electrical Nerve Stimulator
FDA Classification	2
Electrical Requirement	
Device Rating	Power Supply: 2 x AAA batteries
Type of Protection against Electric Shock	Internally powered equipment
The Degree of Protection against Electric Shock	Type BF
Compliance Standard	IEC 60601-1, IEC 60601-1-2
Biocompatibility	
Biocompatibility Evaluation	The biocompatibility of the accessories is evaluated as per the requirement of the standard ISO 10993-1, -5, -10.
Physical Specifications	
Channel	One channel


Number of programs	6 programs (modes)
Output	Adjustable 0 ~ 51 V (For 0 ~ 1000 Ohm)
Pulse width range	150 us
Contraction and Relaxation time	Adjustable, due to different modes. (See below “Mode Specification Table” for detail.)
Treatment time	Default time is 5 minutes, and maximum time is 20 minutes.
Battery life	Approximately 2 ~ 3 hours at nominal settings
LCD display information	Indicate the following information: Sound on/off, Keylock, Low battery, Active areas and positions, Minimum of Workout time, Intensity level, Mode selection.
Dimensions / Weight	
Dimension	Main Unit: 98.5 x 53 x 27.5 mm Headset: 181 x 133 x 36 mm
Weight	90g
Operating & Storage Conditions	
Operating condition	Temperature: 5 ~ 40 °C Relative Humidity: ≤ 80% RH Atmospheric Pressure: 70 ~ 106 kPa
Storage condition	Temperature: 10 ~ 55 °C Relative Humidity: ≤ 95% RH Atmospheric Pressure: 50 ~ 106 kPa
Accessories	
Conductive sponge	Thickness: 0.5mm


Mode Specification Table

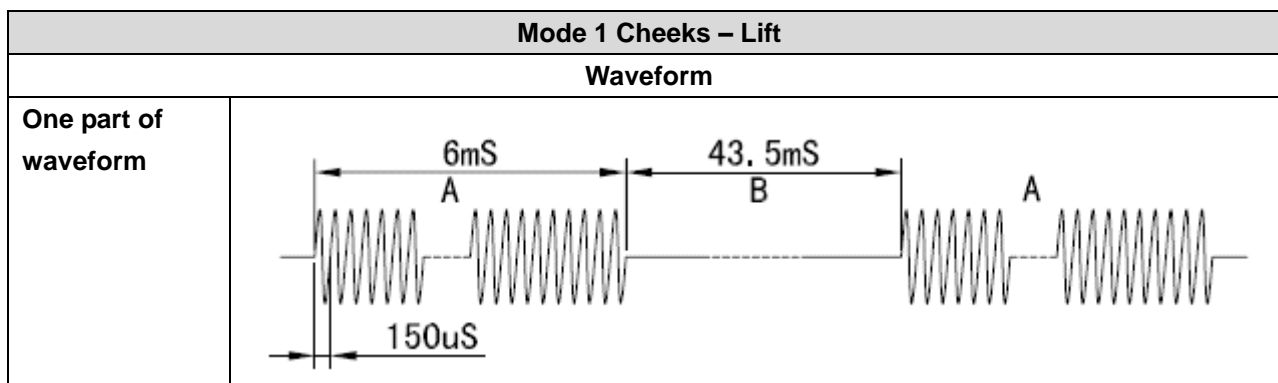



Mode 1 Cheeks – Lift										
One circle of waveform										
Intensity	1	2	3	4	5	6	7	8	9	10
Peak Voltage (V) (1K Ω)	6.8	8.64	10	11.8	13.4	14.8	16.6	17.4	18.2	19.3
Peak Voltage (V) (0.5K Ω)	4.5	5.5	6.48	7.52	8.48	9.28	10.2	11	11.6	12.4
Intensity	11	12	13	14	15	16	17	18	19	20
Peak Voltage (V) (1K Ω)	20.4	21.6	23	24.2	26.4	28.2	29.2	30.4	31.6	34.4
Peak Voltage (V) (0.5K Ω)	12.8	13.6	14.4	15.2	16.6	17.2	18.2	18.8	19.8	21.2
Intensity	21	22	23	24	25	26	27	28	29	30
Peak Voltage (V) (1K Ω)	37.2	38.8	41.2	42.8	44.4	45.2	46.8	48.8	50	51.2
Peak Voltage (V) (0.5K Ω)	23.2	25	26.6	27.8	29.4	29.8	30.8	31.2	31.6	31.8


Mode 2 Cheeks – Firm and Tone	
Waveform	
One part of waveform	

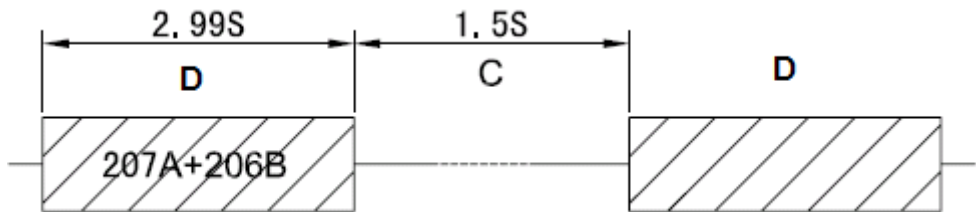
Mode 2 Cheeks – Firm and Tone										
One circle of waveform										
Intensity	1	2	3	4	5	6	7	8	9	10
Peak Voltage (V) (1K Ω)	6.16	6.56	7.04	7.84	8.72	9.68	10.5	11.3	11.7	12
Peak Voltage (V) (0.5K Ω)	3.96	4.24	4.44	4.92	5.36	5.84	6.4	6.88	7.2	7.44
Intensity	11	12	13	14	15	16	17	18	19	20
Peak Voltage (V) (1K Ω)	12.8	13.6	14.6	15.2	16.2	17.4	18.6	19.8	20.8	22
Peak Voltage (V) (0.5K Ω)	7.92	8.4	8.96	9.44	9.84	10.6	11.2	11.8	12.4	13.2
Intensity	21	22	23	24	25	26	27	28	29	30
Peak Voltage (V) (1K Ω)	23	24.2	25.2	26	26.8	28.2	29.3	30	31	32.2
Peak Voltage (V) (0.5K Ω)	13.8	14.4	15.2	15.8	16.2	17	17.6	18.2	18.4	19.2

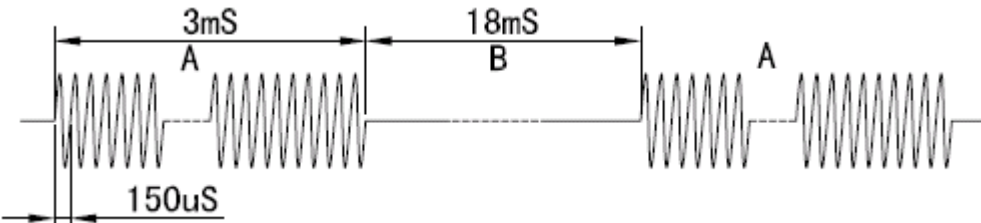
Mode 3 Lower Cheek	
Waveform	
One part of waveform	

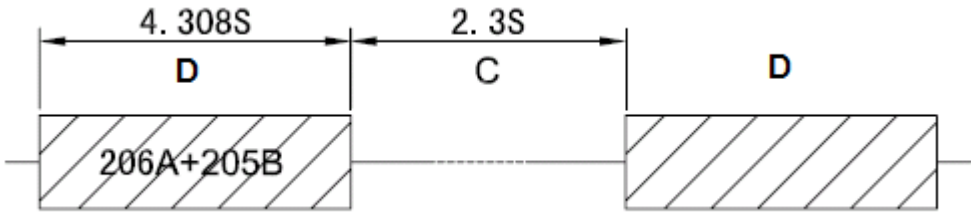
Mode 3 Lower Cheek										
One circle of waveform										
Intensity	1	2	3	4	5	6	7	8	9	10
Peak Voltage (V) (1K Ω)	7.04	7.52	8.4	9.12	10	10.8	11.6	12.8	13.4	14.4
Peak Voltage (V) (0.5K Ω)	4.24	4.56	5.04	5.6	6	6.48	7.12	7.6	8.08	8.64
Intensity	11	12	13	14	15	16	17	18	19	20
Peak Voltage (V) (1K Ω)	15	16.2	16.8	18.2	20.2	21.4	22.8	24.2	25.4	27
Peak Voltage (V) (0.5K Ω)	9.04	9.68	10.2	11	12	12.8	13.8	14.4	15.6	16.4
Intensity	21	22	23	24	25	26	27	28	29	30
Peak Voltage (V) (1K Ω)	27.8	28.4	29.6	31.6	32.8	34	34.8	35.2	36	37.5
Peak Voltage (V) (0.5K Ω)	16.8	17.4	18.2	19.4	20.4	21.2	21.6	21.8	22.4	23

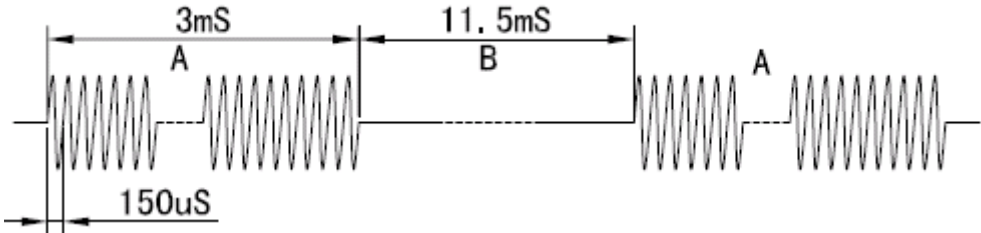Mode 4 Forehead	
Waveform	
One part of waveform	

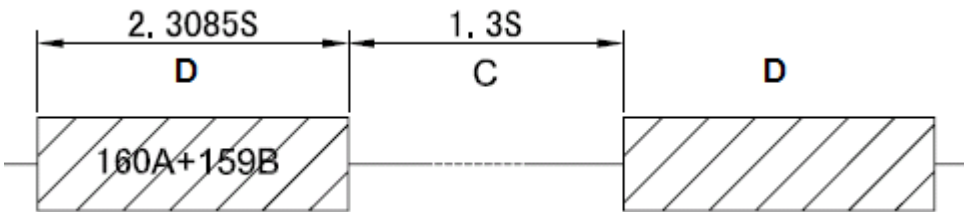Mode 4 Forehead										
One circle of waveform										
Intensity	1	2	3	4	5	6	7	8	9	10
Peak Voltage (V) (1K Ω)	6.24	6.64	6.88	7.92	8.8	9.52	10.4	11.1	11.7	12.2
Peak Voltage (V) (0.5K Ω)	3.84	4.08	4.48	4.88	5.36	5.84	6.4	6.88	7.12	7.36
Intensity	11	12	13	14	15	16	17	18	19	20
Peak Voltage (V) (1K Ω)	13	13.8	14.6	15.6	16.4	17.6	18.8	20	20.8	22
Peak Voltage (V) (0.5K Ω)	7.92	8.32	8.88	9.12	9.84	10.6	11.1	11.8	12.4	13.2
Intensity	21	22	23	24	25	26	27	28	29	30
Peak Voltage (V) (1K Ω)	23	24.2	25	26.4	27	28	29.5	30.2	31.2	32.2
Peak Voltage (V) (0.5K Ω)	13.6	14.4	15	15.8	16.2	16.8	17.4	18	18.4	19.2

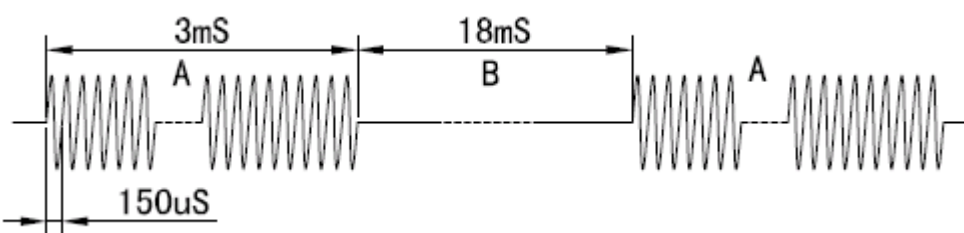Mode 5 Chin, jaw line	
Waveform	
One part of waveform	

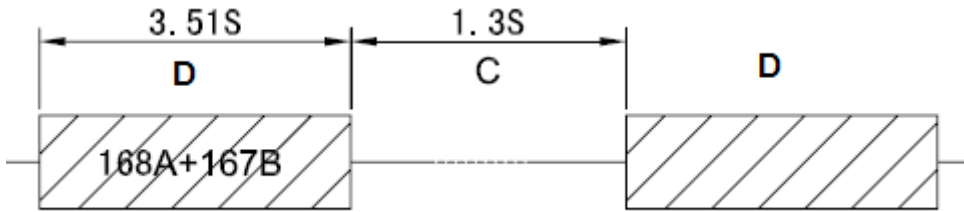Mode 5 Chin, jaw line										
One circle of waveform										
Intensity	1	2	3	4	5	6	7	8	9	10
Peak Voltage (V) (1K Ω)	6.88	7.5	8.32	9.2	10.1	10.8	11.8	12.6	13.5	14.6
Peak Voltage (V) (0.5K Ω)	4.4	4.56	5.04	5.6	6.08	6.48	7.12	7.52	8.08	8.48
Intensity	11	12	13	14	15	16	17	18	19	20
Peak Voltage (V) (1K Ω)	15.4	16.4	17.4	18.6	20.4	21.4	22.8	24	25.6	26.6
Peak Voltage (V) (0.5K Ω)	9.12	9.76	10.2	10.7	12	13	13.6	14.6	15.6	16.2
Intensity	21	22	23	24	25	26	27	28	29	30
Peak Voltage (V) (1K Ω)	27.8	29.2	31	32.8	33.8	34.8	35.6	36.2	37.2	38
Peak Voltage (V) (0.5K Ω)	17	17.6	18.4	19.4	20.2	21	21.6	21.8	22.4	23

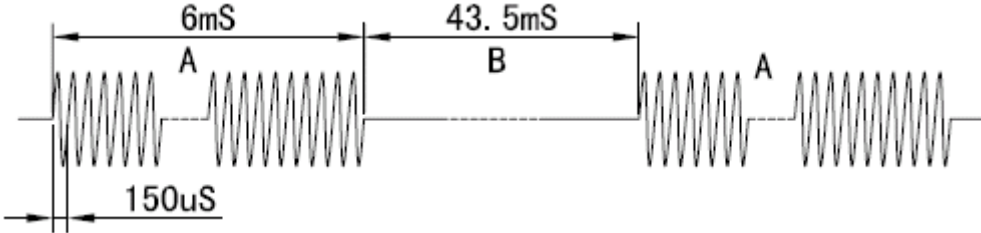Mode 6 Under eye area	
Waveform	
One part of waveform	

Mode 6 Under eye area										
One circle of waveform										
Intensity	1	2	3	4	5	6	7	8	9	10
Peak Voltage (V) (1K Ω)	6.08	8	10	11.5	13.2	14.8	16.2	17.2	18.2	19.6
Peak Voltage (V) (0.5K Ω)	4.08	4.96	6.24	7.2	8.4	9.04	10.2	11	11.5	12.2
Intensity	11	12	13	14	15	16	17	18	19	20
Peak Voltage (V) (1K Ω)	20.6	22	23	24	26.6	28	29.4	30.8	32	34.8
Peak Voltage (V) (0.5K Ω)	12.6	13.6	14.4	15.2	16.4	17.2	18	18.8	19.8	21.2
Intensity	21	22	23	24	25	26	27	28	29	30
Peak Voltage (V) (1K Ω)	37.2	39.6	40.4	42.4	44.4	46	47.6	48.8	50	51.2
Peak Voltage (V) (0.5K Ω)	23.2	25.2	26.6	27.8	28.8	29.6	29.6	29.6	29.6	29.6

10. Operating Instructions

10.1 Installation


10.1.1 Headset and Wand Installation 1



1. Take the application wand




2. Peel off the plastic cover

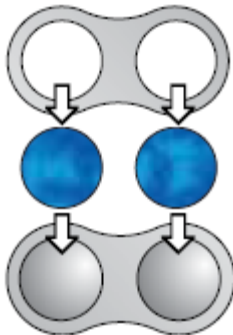

3. Place the conductive sponges onto the wand and press to fix the silicon on top.




4. Finished

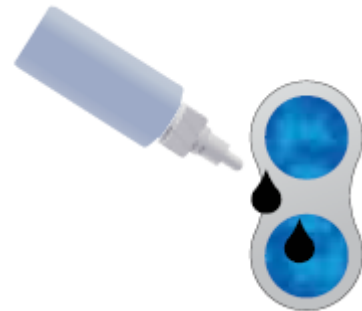


5. Now use the small bottle to drip water until the sponge is wet to the touch.

Repeat on the 2nd application wand if needed.

10.1.2 Headset and Wand Installation 2

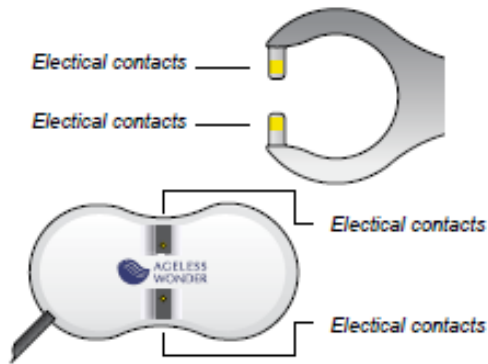

1. Take the application wand.

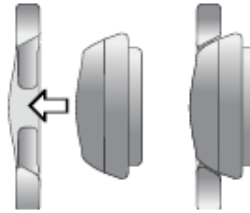


2. Face the contact points towards the headset and press the application wand into the headset using light pressure.




3. Your headset is ready to wear.



4. Use the headset for program mode 1 to 3 when indicated in the LCD display.

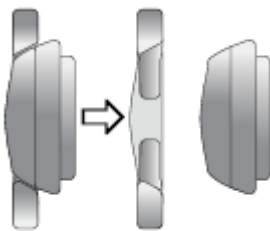

5. Remove the application wand from the headset for handheld operation and push the wand (with the cable attached) lightly towards the center of the headset until it pops out.

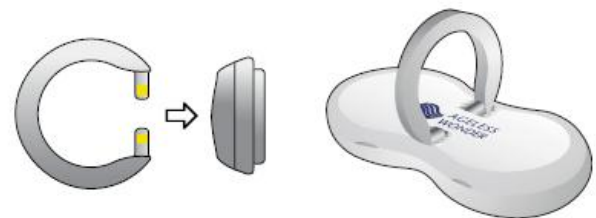

6. For program mode 4 - 6, use the wand attached to the cable and plugs it into the unit. Please note that without the headset, only the wand with the cable will work. We recommend clipping the provided handle into the back of the wand.

10.1.3 Notice of Headset and Wand Installation



The application wands are flexible, to follow the contour of your face.




Take the headset with the inserted application wands and after wetting the sponges, place it from behind your head onto your face.


For program mode 1 and 2, the correct positioning is directly under your cheek bone a little bit towards the back of your face.

The application wands should not be placed towards the front of the face.

10.1.4 BELT CLIP Installation

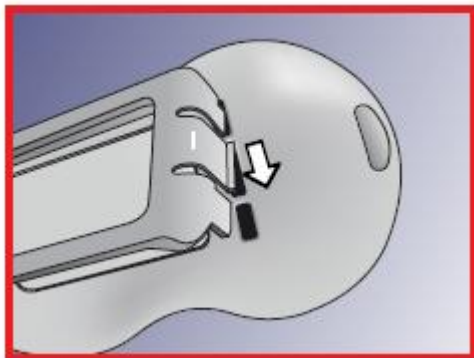

To attach the belt clip, simply push it into the back of the device.

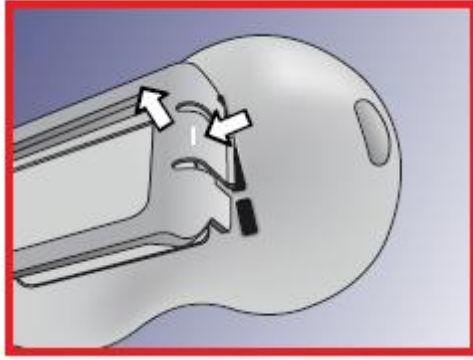

In order to remove the belt clip, push the center area down that is marked with the triangular arrow to release the lock, and at the same time pull the clip away from the unit.

10.2 First Operation

1. Open the battery compartment by sliding the door gently downwards (Please see Figure 1).
 2. Insert 2 x AAA batteries by following the polarity indications in the compartment. (Please see Figure 1).
 3. Plug the application wand into the control unit. (Please see Figure 2).
- Use the wand attached to the cable, plug it into the device. Please note that without the headset, only the wand with the cable will work. We recommend clipping the provided handle into the back of the wand when not using the headset.

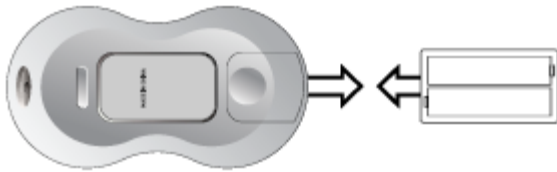




Figure 1

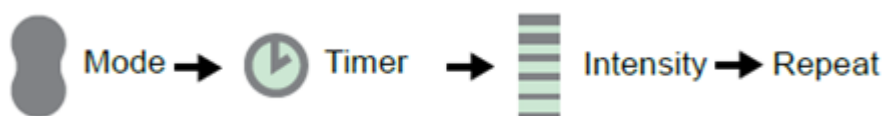



Figure 2



The device will NOT work unless the sponges in the application wand are wet and acting as a conductive medium between your skin and the application wand!

4. Make sure the device is switched off, i.e. the LCD display is OFF. If you accidentally switch the device on, press and hold the button **ON/OFF**  for 2 seconds to switch it off again.
5. Choose a program as described in the next paragraph and either hold the application device in your hand or insert it into the headset, depending on the area you want to stimulate.
6. Switch the device ON by pressing the button **ON/OFF**  once. The LCD display will light up and show the various functions.
7. Use the M button to toggle through the menu:



8. To switch the device OFF press and hold the button **ON/OFF**  for two seconds.
9. KEY LOCK TOGGLE ON/OFF: Press and hold the **MODE M** button together with the “+” button for 2 seconds, while the unit is operating and you are in intensity mode. The LCD will show the key lock icon.
10. MUTE TOGGLE ON/OFF. Press and hold the **MODE M** button together with the “-” button for 2 seconds. The LCD will show the mute icon.
11. LOW BATTERY INDICATION. When the battery voltage becomes too low, the LCD will show the low battery icon. Replace the batteries at once

TIPS: You can simply attach the belt clip by clipping it into the control unit. Now you can enjoy 100% hands free operation when using the headset. To remove the belt clip, press the center part down that is marked with the triangular arrow to release the lock, and at the same time pull the clip away from the unit.

IMPORTANT: The AGELESS WONDER™ device has several built-in safety features:

AUTO OFF: After approximately 30 seconds, the **AUTO OFF** function will turn the device off, if it is not in use.

KEY LOCK TOGGLE ON/OFF: Press and hold the **MODE M** button together with the “+” button for 2 seconds, while the unit is operating and you are in intensity mode.


10.3 Wand Placement

As everyone is created differently, exact positioning of the Ageless Wonder Facial Muscle Stimulation System application wand will vary from person to person. The ideal positioning is adjacent to the motor nerve. While the device is operating, you will be able to move the application wand to find the most effective placement. As you move it around, you will notice contractions becoming either stronger or weaker. The best position is when the strongest contraction is felt.

10.4 Mode Selection

Push the button **MODE M**, and you can choose the mode 1, mode 2, mode 3, mode 4, mode 5, and mode 6 by push the button **+ / -** Mode details refer to item 9.5 Treatment Modes.

10.5 Intensity Selection

Push the button **+/-** when in the Power Mode  intensity level. Level 1 is the first intensity you can feel. The pre-set value is 0 after choosing your program in the mode setting. After increasing the intensity, you will notice a tingling sensation prior to the muscle contracting. Once the muscle is contracting, you will feel pleasant and relaxed. Adjust the intensity according to your comfort level.

The intensity level has 30 steps per channel. With every push of the button **+/-**, you increase / decrease the intensity by one step.

Press and hold the button **+/-** for 1.5 seconds to enter fast scroll mode.



Intensity Level: Power with 30 Intensity Levels



The Ageless Wonder Facial Muscle Stimulation System has several built-in safety features:

A) AUTO OFF: After approximately 30 seconds, the AUTO OFF function will turn the device off, if it is not in use.

B) KEY LOCK TOGGLE ON/OFF: Press and hold the button **MODE M** together with the “+” button for 2 seconds, while the unit is operating and you are in intensity mode. The LCD will show the key lock icon.

TIPS: For best results we recommend to set the intensity at a low level. To find a good training intensity, increase the intensity to the maximum tolerable level and reduce it 1-3 levels from there, until you feel comfortable and the unit is still generating strong muscle contractions.

10.6 Timer Setting

Default time is 5 minutes. Press the button **+/-** once to increase or decrease the time increment.

Maximum time is 20 minutes.

1. To switch the device off, press and hold the button **ON/OFF**  for 2 seconds.

2. To turn the sound on/off, press and hold the **MODE M** button and “–” button for 2 seconds.
The display will show the ‘sound off’ icon.



10.7 Auto Functions

The device will automatically turn off after 30 seconds if not in use. The Ageless Wonder Facial Muscle Stimulation System has an auto-timer. It will automatically switch off after the chosen timer setting. If you change the exercise mode during an e.g. 15 minute exercise period, the timer will continue to count-down from the original leftover time and not re-start the initial timer setting.

What to do if you do not feel any muscle contractions




If no muscle contractions are felt, move the application wand slowly around the area you want to target. Make sure the sponge of the application wand is moist to the touch. Gradually increase the PULSE INTENSITY by pushing the + button until muscle contraction is felt.

The Ageless Wonder Facial Muscle Stimulation System is a great way to tone, lift and firm your face. It may take a few moments of practice to locate the application wand correctly and apply the ideal pressure that will produce the best results for you.

TIPS: If the sponge of the application wand is not moist enough, or the skin contact is not sufficient, you may experience an uncomfortable tingling sensation. The same may happen if the sponge is worn and needs to be replaced.

11.Troubleshooting

Problem	Cause	Remedy
LCD Display does not light up at all	<ul style="list-style-type: none"> - Batteries not installed - Batteries installed incorrectly or battery tray not properly locked into place - Batteries are dead 	<ul style="list-style-type: none"> - Install Batteries - Check polarity “+” sign - Remove the battery tray and re-insert it, until it locks into place. A confirmation beep should sound. - Replace Batteries

Problem	Cause	Remedy
LCD Display lights up, but no sensation is felt.	<ul style="list-style-type: none"> - No skin contact - Application wand is not plugged in correctly - Application wand is not attached to headset correctly - Microprocessor freeze - Battery is low 	<ul style="list-style-type: none"> - Check to see if the conductive sponge is wet to the touch - Check that wand plug is connected firmly to the control unit - Check operation with handheld wand first to isolate the problem. If handheld operation works attach wand to the headset and- - Check that both wands are properly attached to the headset. - Choose  mode and Increase intensity by pushing the + button - Perform a RESET, remove batteries for 1 minute for full RESET - Change Batteries
LCD Display lights up, but nothing occurs	<ul style="list-style-type: none"> - Intensity set to low level - Sponge is not wet enough - the wands are positioned incorrectly - Sponge has oil deposits. - Battery is low 	<ul style="list-style-type: none"> - Choose  mode and Increase intensity by pushing the + button - Put more water on the sponge - Move wand around to locate your trigger points. - Clean or replace sponge - Change Batteries
LCD Display lights up, but none of buttons work	<ul style="list-style-type: none"> - Microprocessor freeze - Battery is low 	<ul style="list-style-type: none"> - Perform a RESET, remove batteries for 1 minute for full RESET - Change Battery
 POWER RESET <p>If the unit does not switch on, or if you can't change to different programs, the microprocessor may have "frozen". Please perform a simple RESET. Remove batteries and replace them after 1 minute.</p>		

12. Frequency Asked Questions

Q. How does the Ageless Wonder Facial Muscle Stimulation System work?

A. The Ageless Wonder Facial Toning Device is a battery-powered portable EMS device. It applies

specially designed bi-polar low voltage micro-current impulses on the face. Not for use on injured or otherwise impaired skin or muscles, or use in any therapy or for the treatment, diagnosis, prevention or cure of any medical conditions or diseases.

Q. Are there any age restrictions on use of the Ageless Wonder Facial Muscle Stimulation System?

A. The Ageless Wonder Facial Muscle Stimulation System is for adult use only. The elderly should only use the device under supervision and at low intensity. The device should not be used by infants, toddlers or children.

Q. Will I find it uncomfortable?

A. As long as the sponge is moist and kept firmly against the skin, you will not feel any unpleasantness. At low intensity, you will feel a slight tingling sensation, but as the intensity gets higher you will only feel pleasant contractions. However, should you feel irritation or continued uncomfortable sensations in a specific area, we recommend moving on to stimulate other areas.

Q. Should the intensity settings be the same for each muscle?

A. Each muscle will respond differently, so intensities will vary accordingly. Move the application wand around to find the right trigger point that gives you maximum contractions.

Q. Are there any contra-indications to use of the Ageless Wonder Facial Muscle Stimulation System?

A. Yes. Please read all Contraindications in this manual carefully.

Q. When should I notice any difference?

A. Depending on the frequency of use.

13. Maintenance

13.1 MAINTENANCE



Do not immerse the device, the application wand or the headset in water!

13.2 CLEANING

- If the device is very dirty, wipe it clean with a sterilizing cloth moistened with a neutral detergent.

Then wipe it again with a sterilizing cloth moistened with 75% Ethanol for 60s. Then wipe it with a dry cloth.

14. Transportation

Ageless Wonder Facial Muscle Stimulation System contains precision components, so avoid vibration during transport.

Keep the device at a normal temperature and avoid prolonged sun exposure during transport.

15. Warranty Period

Ageless Wonder Facial Muscle Stimulation System warrants for a period of 1 year from the date of sale of the device.



This warranty does not cover damages due to misuse, reprocessing, alteration, unauthorized repair or negligent handling, or defects due to lack of care by the Customer, or assigned user of the Product including but not limited to storage, handling or cleaning.

16. Packing List

No.	Description	Quantity
1	Ageless Wonder Facial Muscle Stimulation System (including: Application wands, Headset, Belt Clip)	1
2	Cable	1
3	Small bottle	1
4	Conductive Sponge	6
5	User Manual (Included maintenance card)	1
6	Warranty Card	1
7	Pluggable Handle	1



Company: Leto Enterprises Incorporation
ADD: 19/F, Nan Dao Commercial Building
359-361 Queen's Road Central, Hong Kong, China
Tel: +852-3694 0110
Fax: +852-2515 3995
E-mail: dir@leto-ent.com

Distributed by:
Thane International, Inc.,
La Quinta, CA 92253, U.S.A.
www.thane.com
Customer Service # 1-877-588-2328

Manual Version: V1.1 (Release with software version 1.0)
Issue Date: 2012-07-10

ONE YEAR LIMITED WARRANTY

AGELESS WONDER™

The AGELESS WONDER™ is warranted, to the original owner, for one (1) year from the date of purchase against defects in material and workmanship under normal use and service. Should your AGELESS WONDER™ prove defective within one (1) year from date of purchase, please contact customer service immediately at the number provided below.

Please package your AGELESS WONDER™ carefully to avoid damage in transit. Under this warranty, Thane Direct, will repair or replace any unit found to be defective. This warranty is effective only if the product is purchased and operated in the USA. This warranty extends only to personal use and does not extend to any product that has been used in a manner for which it is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable.

Thane Direct, is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation, other consequential damages of whatsoever nature, failure to follow instructions or warnings in owner's manual or use of products in a manner for which they were not designed.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

1. Damage due to accident, misuse, abuse or vandalism.
2. Improper or inadequate maintenance.
3. Unauthorized modification.
4. Damage in return transit.
5. "Normal" wear of parts (wear & tear that occurs over time and with use) including chips, scratches, abrasions, discoloration or fading.
6. Repairs made by an unauthorized service technician.

TO OBTAIN SERVICES: The original purchaser should immediately contact our customer service representative at 1-877-588-2328 and depending on the extent of the service requested, the purchaser shall have the obligations and responsibility to:

- Pay for all services and parts not covered by the warranty.
- Prepay the shipping and handling.
- Carefully package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose.
- Include in the package: the owner's name, address, telephone number, and a detailed description of the problem.
- Provide the proof of purchase, which includes date of purchase.
- Send via Insured* Parcel Post or courier to: Thane Direct.
- Or otherwise as instructed by customer service.

FOR ANY INQUIRES, PLEASE CONTACT THANE DIRECT CUSTOMER SERVICE
AT THIS TOLL FREE NUMBER 1-877-588-2328

*Thane Direct is NOT responsible for any non-insured items lost in transit